



WWW.GVISION-USA.COM

C22BD-A6-4000

USER'S MANUAL

SECURITY CCTV MONITOR

GVISION USA, INC

30398 Esperanza, Rancho Santa Margarita CA 92688 / 949.586.3338 / info@gvision-usa.com

Important Information



WARNING



TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO, DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLETS UNLESS THE PRONGS CAN BE FULLY INSERTED.

REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



CAUTION



TO REDUCE THE RISK OF ELECTRIC SHOCK, MAKE SURE POWER CORD IS UNPLUGGED FROM WALL SOCKET. TO FULLY DISENGAGE THE POWER TO THE UNIT, PLEASE DISCONNECT THE POWER CORD FROM THE AC OUTLET. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol warns user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

CAUTION: Please use the power cord provided with this display in accordance with the table below. If a power cord is not supplied with this equipment, please contact GVISION. For all other cases, please use the power cord with the plug style that matches the power socket where the monitor is located. The compatible power cord corresponds to the AC voltage of the power outlet and has been approved by, and complies with, the safety standards in the country of purchase.

**When operating this monitor with its AC 125-240V power supply, use a power supply cord that matches the power supply voltage of the AC power outlet being used.*

Care and Cleaning

- Always unplug your monitor from the wall outlet before cleaning. Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any liquid, aerosol or glass cleaners.
- Slots and openings on the back or top of the cabinet are for ventilation. They must not be blocked or covered. Your monitor should never be placed near or over a radiator or heat source, or in a built-in installation unless proper ventilation is provided.
- Never push objects or spill liquid of any kind into this product.

Safety Precautions / Maintenance

- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the monitor combination to avoid injury from tip-over.
- Unplug the monitor during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the monitor has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it.
- Do not stick metal objects or any other conductive material into the power cord. Do not touch the end of the power cord while it is plugged in.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children. Anti-moisture material is harmful if swallowed. If swallowed, induce vomiting and go to the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.
- Concerning the Power Cord (Can differ by country): Check the specification page of this owner's manual to be certain concerning current requirements. Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device. Do not move the monitor with the power cord plugged in. Do not use a damaged or loose power cord. Be sure do grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the monitor.
- To reduce the risk of fire or electrical shock, do not expose this product to rain, moisture or other liquids. Do not touch the screen with wet hands. Do not install this product near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
- Do not use high voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.
- Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
- Do not attempt to modify this product in any way without written authorization from GVISION. Unauthorized modification could void the user's authority to operate this product.
- **Moving:** Make sure the product is turned off, unplugged, and all cables have been removed. Do not press or put stress on the front panel of the monitor screen.
- If you smell smoke or other odors coming from the monitor screen, unplug the power cord and contact an authorized service center.
- If water or another substance enters the product (like an AC adapter, power cord, or display unit), disconnect the power cord and contact the service center immediately. Otherwise, this may result in fire or electric shock.


Table of Contents

1. Controllers & Settings.....	5
1.1 Monitor Interface.....	5
1.2 Monitor Controller Button.....	6
1.3 Remote Control.....	7
1.4 Select Input Source.....	7
1.5 OSD Menu.....	8
1.5.1 Picture.....	8
1.5.2 PC.....	10
1.5.3 Sound.....	11
1.5.4 Setting.....	12
2. Specifications.....	13
3. Dimensions.....	14

1 Controllers & Settings


21.5" Commercial Grade security CCTV monitor is built to operate 24/7, and designed to support digital HDMI, BNC in / output for CCTV camera.

 1.1 Monitor Interface

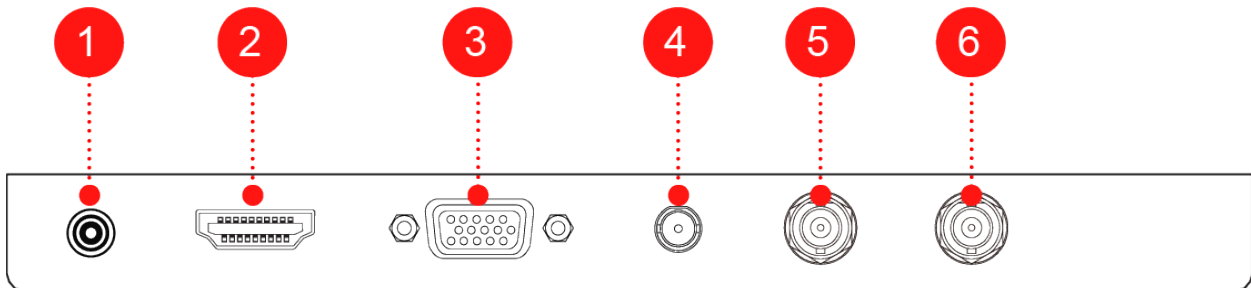


INTERFACES INSTRUCTION		
1	DC12V	Main power input of monitor, DC12V
2	HDMI IN	HDMI Input Source
3	VGA IN	VGA Input Source
4	PC AUDIO IN	Audio Input for VGA Input channel
5	BNC(CVBS) IN	BNC Input for CVBS Source
6	BNC(CVBS) Out	BNC Looping output for CVBS Source

 1.2 Monitor Controller Button

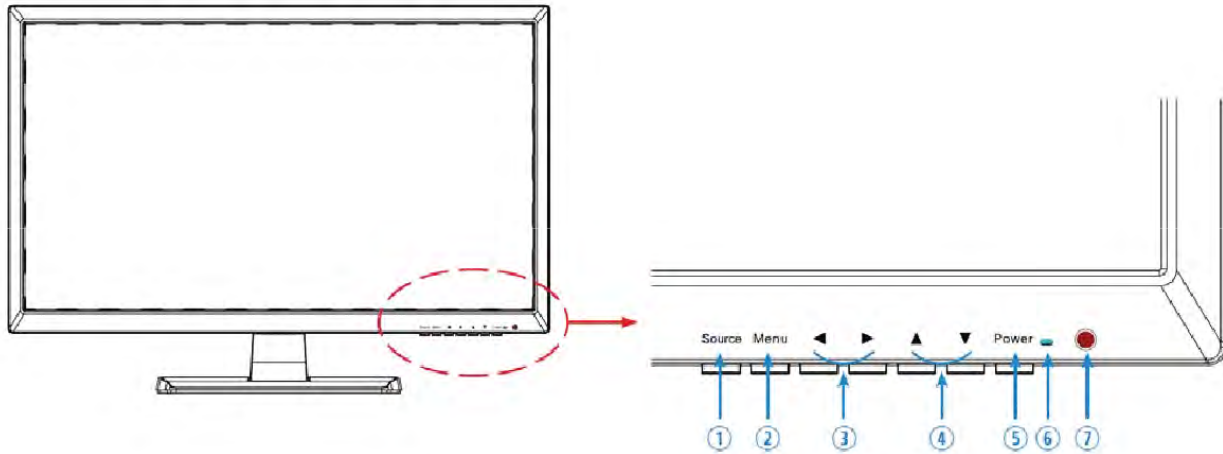

1	SOURCE	Select an input source
2	MENU	Enter the menu, save the adjustment of sub menu and exit the OSD
3	LEFT/RIGHT	Change the value on selected menu
4	UP/DOWN	Switch a menu on OSD
5	POWER	Monitor Power On / Off
6	LED Indicator	Blue color: monitor on / Red color: monitor standby
7	IR Receiver	Remote controller receiver

 
1.3 Remote Control

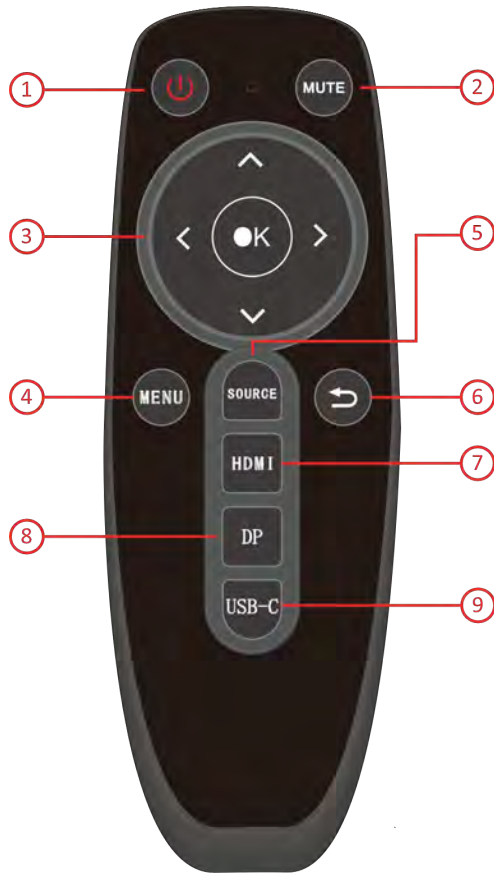

1	Power button Press to enter or exit the standby mode.
2	Mute button Press to turn on or off the audio output.
3	OK button Press to confirm selection in the setup menu.
4	Menu button Press to enter or exit the setup menu.
5	Source button Press to enter or exit the interface menu.
6	Return button Press this key to return the menu.
7	HDMI button Press to enter HDMI mode.
8	DP button Press to enter DP mode.
9	USB-C Press to enter USB-C mode.

1.4 Select Input Source

 
1. Press "SOURCE" button on monitor or "INPUT" button on remote controller.
2. Press "SOURCE" button to change input source and then press ► button to select input source on monitor.
3. Press ▲/▼ button to change input source and then press "INPUT"/► buttons to select input source on remote controller.

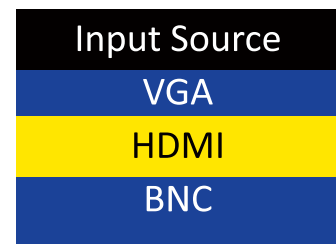


1.5 OSD Menu

1.5.1 Picture

 Select Picture from the menu.

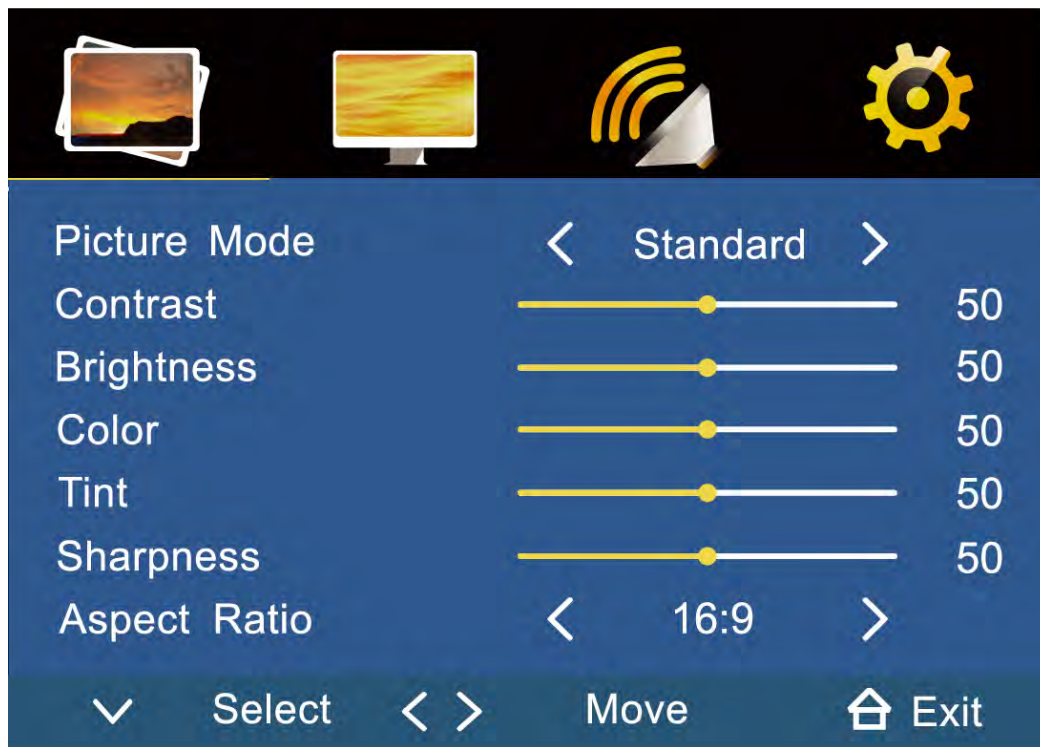


Picture Mode	Choose for User/ Dynamic/ Standard/ Mild for most pleasing image based on ambient light.
Contrast	Adjusts the range of difference between light and dark areas of the picture.
Brightness	Adjusts the overall picture brightness.
Color	Adjust the color saturation 0-100.
Tint	Increase or decrease the intensity of colors in the image.
Sharpness	Change the balance between image detail (Resolution) and degree of transition between areas of differing brightness.
Aspect Ratio	Choose between SD 4:3 and HD 16:9 aspect ratio. If analog images appear stretched use 4:3 scaling.

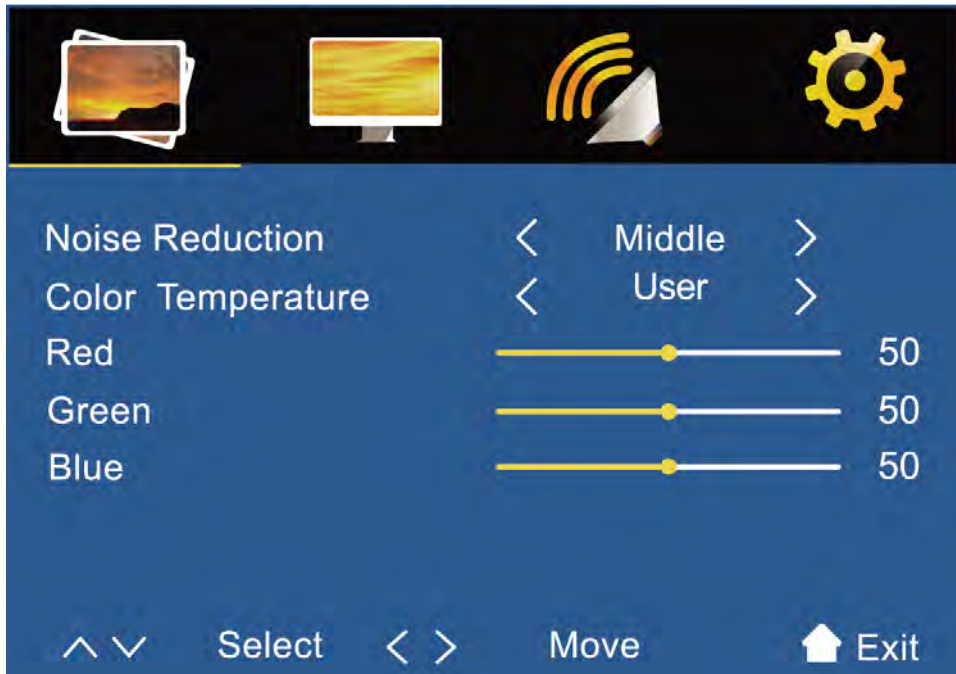 

Noise Reduction	Reduce noise of the display image (LOW/MIDDLE/HIGH/ OFF).
Color Temperature	Adjust color reproduction: choose between Warm/ User/ Cool/ Medium. In the “USER”, setting you have full control to alter the individual settings “Red:0-100, Green: 0-100, and Blue:0-100.

1.5.2 PC (Only available with VGA input)

 
Select PC from the menu.

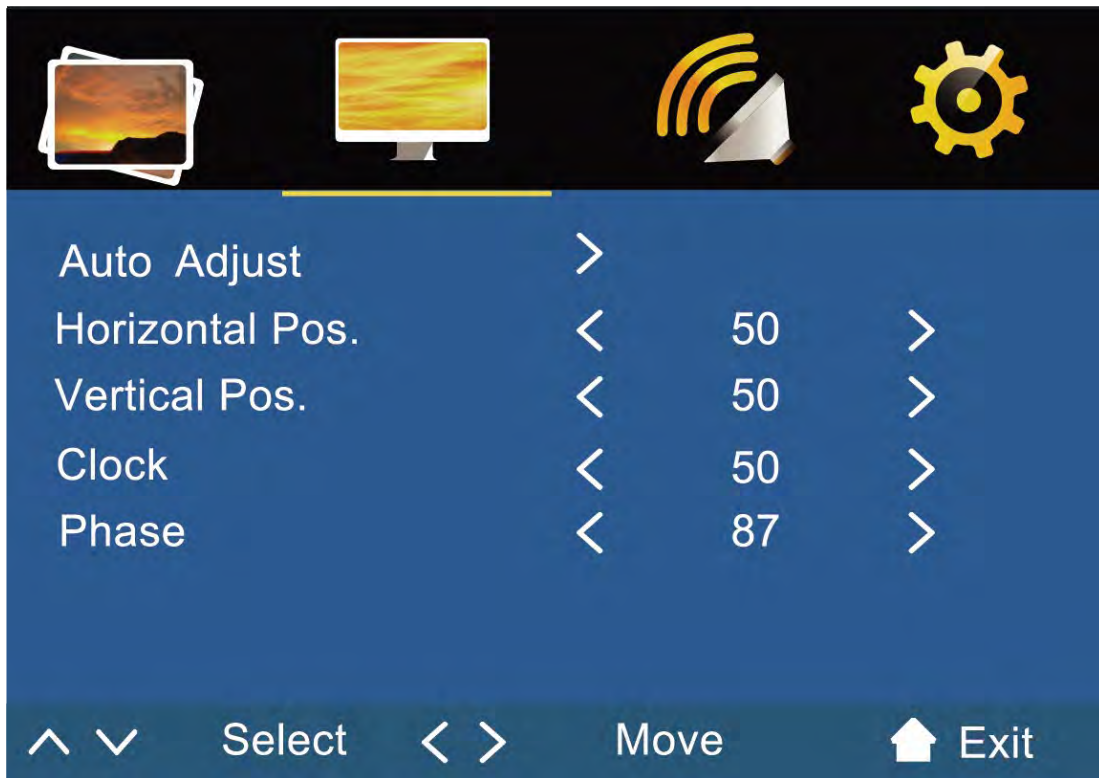

Auto Adjust	Fit the image setting automatically.
Horizontal Pos.	Adjust the H-Position position of picture.value:0~100.
Vertical Pos.	Adjust the V-Position position of picture.value:0~100.
Clock	Adjust the Clock of picture.value:0~100.
Phase	Adjust the Phase of picture.value:0~100.

1.5.3 Sound

 
Select Sound from the menu.

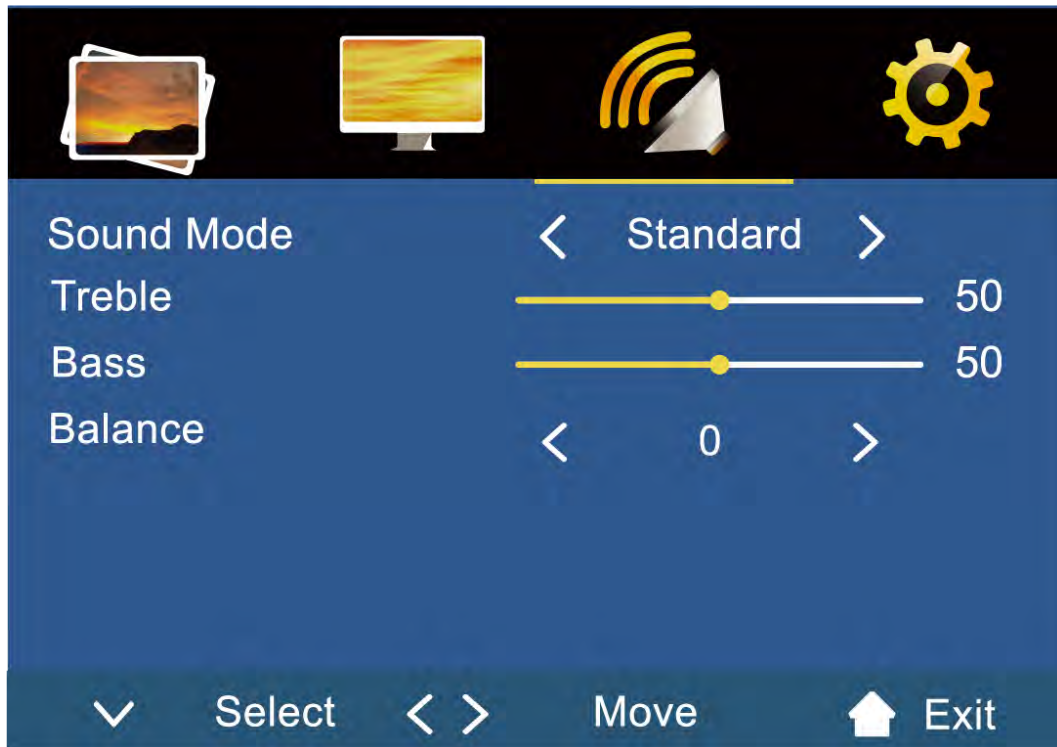

Sound Mode	Select one of the presets (User, Sport, Movie, Music, Standard).
Treble	Adjust the Treble of picture.value:0~100.
Bass	Adjust the Bass of picture.value:0~100.
Balance	Adjust the Balance of picture. Value: -50 ~ +50.

1.5.4 Setting

 Select Setting from the menu.

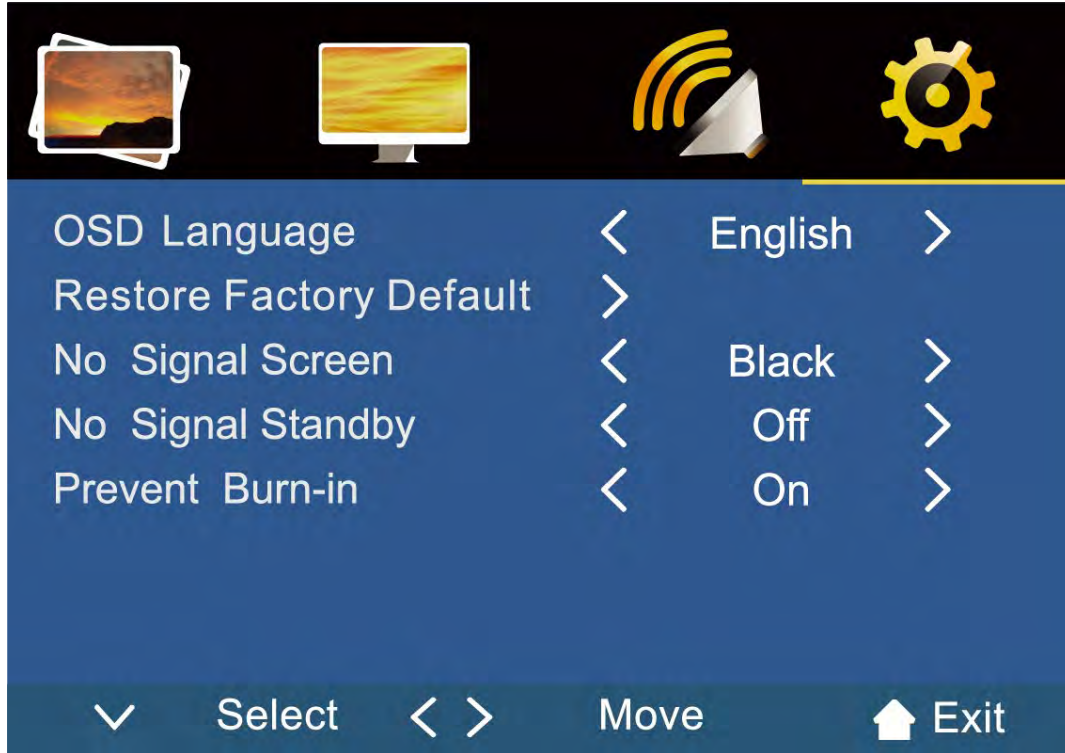

OSD Language	Choose OSD display language from English/French/Spanish Italian/ Netherlands/ Polish/ Czech/ Danish by pressing Left/Right buttons.
Restore Factory Default	Reset the monitor settings to the factory default by pressing Left/Right buttons.
No Signal Screen	Allows the user to select Black or Blue for the screen when no signal is detected by pressing Left/Right buttons.
No Signal Standby	Allows the user to select ON/OFF the standby model.
Prevent Burn-in	Allows the user to select the prevent Burn In model.

2 Specifications

MODEL	C22BD-A6-4000
Resolution	1920 x 1080
Refresh	60Hz
Brightness (MAX)	250cd/m ²
Response Time (Typical)	5ms
Aspect Ratio	16:9
Viewing Angle	178°(H)/178°(V)
Display Color	16.7M (8-bit)
INTERFACE	
CVBS BNC In	1
CVBS BNC Out	1
HDMI In	1
VGA In	1
PC Audio In	1
AUDIO	
Speaker	3Wx2
CABINET	
Color/Material	Black/Plastic
POWER	
Consumption	Typical 20W
Electrical Rating	12V DC / 3A (AC 100V ~ 240V, 50/60Hz)
TEMPERATURE	
Operating	0~50°C
VESA™	
Mount Size	100x100mm

Specifications subject to change without any notice

3 Dimensions

C22BD-A6-4000

